 


指撥開關



SW	說明
1	Address bit 0
2	Address bit 1
3	Address bit 2
4	Address bit 3
5	Address bit 4
6	Address bit 5
7	OFF = None parity check , 1 stop bit ON = None parity check , 2 stop bit
8	OFF = Baud rate 9600 ON = Baud rate 19200

數位通訊協定位址表

Address	Code	Word	Function	Range
0000H	03H	1	Read DI1 ~ DI8	0000H ~ 00FFH
0001H	03H / 06H	1	Read / Write DO1 ~ Do8	0000H ~ 00FFH

 
Ex : 讀取第一站資料

Send : 01 03 00 00 00 02 CRC (此例 CRC 為 C4 0B)


Received : 01 03 04 XX 00 XX CRC

配線圖


● 3 組電壓 + 3 組電流 (貫穿式 CT)



● 6 組電壓

 

● 6 組勾式 CT

 

端子代碼	說明
+24V	接電源供應器 +24V (最大 330mA)
0V	接電源供應器 0V
A	RS-485 +
B	RS-485 -
G	RS-485 GND (參考點, 可不接)
DI1 ~ DI8	輸入點 1 to 8
1A, 1C ~ 8A, 8C	輸出點 1 to 8 (5A / 30VDC / 250VAC)
COM	PNP : 輸入點之 Common 點, 與 +24V 同電位 NPN : 輸入點之 Common 點, 與 0V 同電位